

## PHRASES NMEA INPUT

Apparent wind angle	MWV VWR	MWV VWR
Apparent wind speed	MWV VWR	MWV VWR
Bearing to waypoint	BWC APB	APB BWR BWC RMB BER BEC
Course over ground	VTG	VTG VTA RMC RMA
Cross track error	XTE APB	APB XTE APA RMB
Date	ZDA	ZDA RMC
Depth	DBT	DBT DPT
Distance (log)	VLW	VLW
Distance (trip)	VLW	VLW
GPS fix/no fix	GGA GLL	GGA GSA
GPS HDOP	GSA GGA	GGA GSA
Heading	HDM HDG VHW HDT	HDM HDG VHW HDT
Latitude longitude	GGA GLL	GGA GLL RMC RMA
Locked heading	HSC	---
MOB (cancel)	PNATA	PNATA
Rudder angle	RSA	---
Speed over ground	VTG	VTG VTA RMC RMA
Temperature water	MTW	MTW
Time	ZDA	ZDA GLL ZFO ZTG
True wind angle	MWV VWT	MWV
True wind direction	MWD	---
True wind speed	MWV VWT MWD	---
Variation	HDG	---
Waypoint capture	WPL	---
Waypoint destination	APB BWC	APB BWR BWC RMB BOD WCV BER BEC
Waypoint arrival alarm	APB AAM	APB APA AAM
Waypoint distance	BWC	BWC BWR
Waypoint time to go	ZTG	---

## PHRASES NMEA OUTPUT